


**OTOMATİK PORTAKAL
SIKMA MAKİNELERİ**
KULLANIM KLAVUZU

**AUTOMATIC ORANGE
JUICER MACHINES**
USER GUIDE

CANCAN®
• SINCE 1958 •
horeca equipment for professional

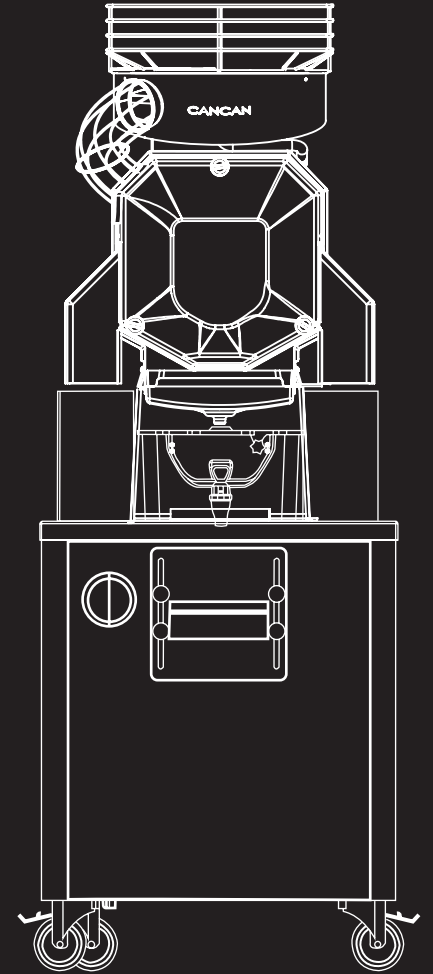

Horeca Equipment For Professionals

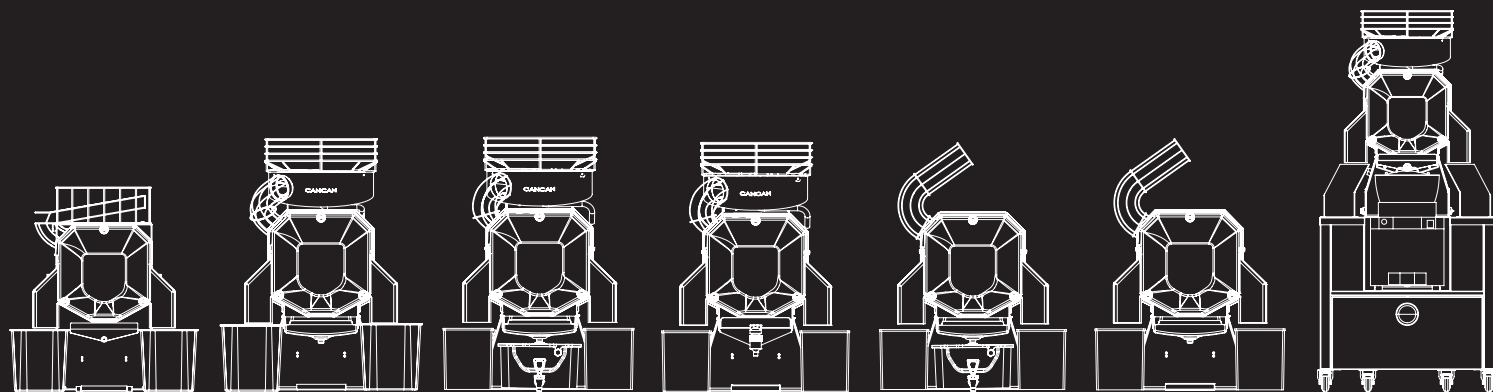


TABLE OF CONTENT

1 - INTRODUCTION	32
2 - GENERAL INFORMATION	32
3 - TECHNICAL SPECIFICATIONS	33
4 - INSTRUCTIONS FOR USAGE	
4.1 - Preparation	35
4.2 - Start Up	37
4.3 - Cleaning	38
5 - MAINTENANCE	40
6 - SPARE PARTS PICTURES AND LIST	
6.1 - Cancan 28 Cafe Type	41
6.2 - Cancan 38 With Glass	42
6.3 - Cancan 38 With Juice Tank	43
6.4 - Cancan 38 Fresh	44
6.5 - Cancan 38 With Cooling System	45
6.6 - Cancan 32 With Glass	46
6.7 - Cancan 32 With Juice Tank	47
7- ACCESSORIES	
7.1 - Cancan 38 & 32 Mobile Stand	48
7.2 - Cancan 28 Mobile Stand	49
7.3 - Mobile Stand With Double Trash Can	50
7.4 - Mobile Stand (Cooler Model)	51
7.5 - Bottle Stand With Shelves	52
7.6 - Conveyor	52
7.7 - Aj Lemon Tools	53
8 - PROBLEMS,SOLUTIONS AND SAFETY MEASURES	
8.1 - Safety Precuations	55
9 - ELECTRICAL DIAGRAM	55
10- CE CERTIFICATE	56
11- WARRANTY	57

1. INTRODUCTION

The CANCAN Automatic orange juicers are designed to extract citrus fruits such as oranges, mandarins, grapefruits and lemons in public places such as hotels, restaurants, commercial centers, entertainment and shopping centers, dormitories, universities, snack bars, etc.

The machine (In the Fresh model, the machine works as soon as the tap is pressed, without the need for a button.), automatically feeds the fruit into the processing area, cuts the fruit and squeezes them with one single button. It is very easy to use. Along with high production rate and efficiency, the machines also provides hygiene and safety requirements.

2. GENERAL INFORMATION

First of all thank you for choosing our company and for your interest and confidence in our products.

This Instruction Manual includes general information for the CanCan Automatic Juicers models, listed below;

- CanCan 28 Cafe Type (0206)
- CanCan 38 With Glass (0203)
- CanCan 38 With Juice Tank (0204)
- CanCan 38 Fresh Model (0205)
- CanCan 38 With Cooler System (0208)
- CanCan 32 Pomegranate Juicer With Glass (0601)
- CanCan 32 Pomegranate Juicer With Juice Tank (0602)

In order to get the best performance of the product please read the InstructionManual carefully.
Always keep the instruction manual near the machines for easy reference in any case.

Do not perform any maintenance or cleaning on your purchased product before reading the manual.

You will have these below listed Items together with the machine that you have purchased;

- 1 Instruction Manual
- 1 Drip Tray (In The Cancan 38 With Juice Tank Model there is a Juice Tank.)
- 1 piece of 2,5 Allen Key (To assemble and disassemble the Orange Feeding Wire)
- 2 pieces of Peel Buckets.
- 1 Filter





As Spare Parts you will have these below listed Items;

- 1 Right Peeler
- 1 Left Peeler
- 2 Male Screws
- 2 Female Screws.

NOTE: If anything is missing or broken, please notify the supplier within 3 days.

Please do not hesitate to call us if you have any questions or concerns about our product. Our company attaches great importance to all comments, suggestions and criticisms about our products.




3. TECHNICAL SPECIFICATIONS

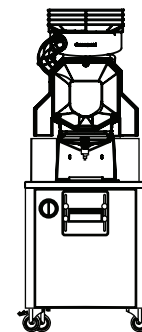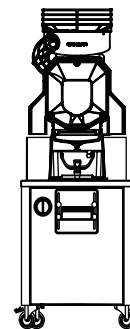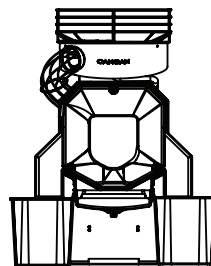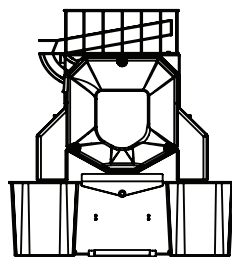

MODEL	CC 28 CAFE TYPE	CC 38 WITH GLASS	CC 38 WITH JUICE TANK AND MOBILE STAND	CC 38 FRESH MODEL WITH MOBILE STAND
PRODUCTS CODE NUMBER	0206	0203	0204 - 1101	0205 - 1101
SQUEEZING CAPACITY	28 pcs /min	38 pcs /min	38 pcs /min	38 pcs /min
FRUIT DIAMETER	Ø 6-8 cm	Ø 6-8 cm	Ø 6-8 cm	Ø 6-8 cm
FRUIT FEEDER CHAMBER	7 kg	15 kg	15 kg	15 kg
MOTOR	0,25 kw	0,37 kw	0,37 kw	0,37 kw
CONSUMPTION	2,5 A	3,2 A	3,2 A	3,2 A
POWER	220-240 V	220-240 V	220-240 V	220-240 V
FREQUENCY	50-60 Hz	50-60 Hz	50-60 Hz	50-60 Hz
WEIGHT	45 kg	76 kg	117 kg	117 kg
WIDTH	73 cm	79 cm	69 cm	69 cm
DEPTH	41,5 cm	58 cm	70 cm	70 cm
HEIGHT	86,5 cm	98 cm	181 cm	181 cm

*Mobile Stand is optional.

*Mobile Stand is optional.

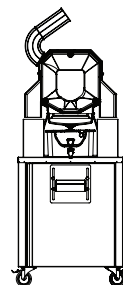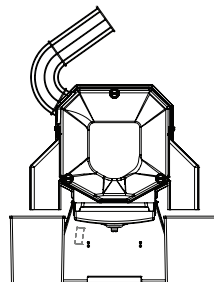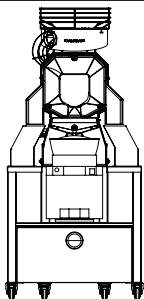

MODEL	CC 38 WITH COOLER SYSTEM	CC 32 POMEGRANATE JUICER WITH GLASS	CC 32 POMEGRANATE JUICER WITH JUICER TANK & MOBILE STAND
PRODUCTS CODE NUMBER	0208	0601	0602-1101
SQUEEZING CAPACITY	38 pcs /min	32 pcs /min	32 pcs /min
FRUIT DIAMETER	Ø 6-8 cm	Ø 7-10 cm	Ø 7-10 cm
POMEGRANATE FEEDING CAPACITY	-	6-8 Pieces	6-8 Pieces
FRUIT FEEDER CHAMBER	15 kg	-	-
MOTOR	0,37 kw	0,55 kw	0,55 kw
CONSUMPTION	3,2 A	4,5 A	4,5 A
POWER	220-240 V	220-240 V	220-240 V
FREQUENCY	50-60 Hz	50-60 Hz	50-60 Hz
WEIGHT	149 kg	68 kg	109 kg
WIDTH	85 cm	74 cm	69 cm
DEPTH	81 cm	71 cm	71 cm
HEIGHT	181 cm	98 cm	183 cm

*Mobile Stand is optional.

4. INSTRUCTIONS FOR USAGE

4.1 Preparation

Remove the Machine completely from its Packaging. Make sure that no parts are left in the packaging box before operating your machine.

Put the product on a flat surface.

Keep your machine away from any excaffective device (stove, oven, sunshine etc.).

Make sure that the area of the ventilation holes in the back sheet cabinet is open of your machine.

Caution: It is suggested that you should use it in a cool atmosphere or room temperature.

Connect your machine to grounded city network (220 Volt).

Put the Peel Buckets on both sides of your machine, under the pulp outlet points on the cover. **(Figure 1).**

If you have purchased the Mobile Stand with the Juicer; before putting the Juicer on the Mobile Stand, take the wheels of the Mobile Stand into braked position. Put The Juicer on the Mobile Stand and make sure that the L metal sheets stay inside. Align the holes on the foot with the holes on the L Iron Sheet to the same axis and fix it with the male screws. **(Figure 2).**

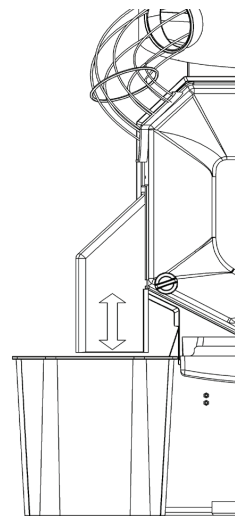


Figure 1

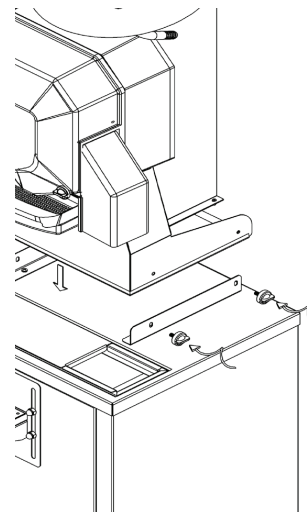


Figure 2

After you have fixed the Juicer on the Mobile Stand, remove the wheels from the braking position into movement and move the machine carefully to the place where you will use it. Then bring the wheels back to the braked position. **(Figure 3).**

Before using the machine, wash the food contact pieces.

Caution: Never squeeze fruits exceeding Ø80 mm in this machine. Only recommended (Oranges, tangerine, grapefruit, lemon) fruit should be squeezed which diameter are Ø60 to Ø80 mm. **(Figure 4).**

On the Fresh model, put the tap in its place and turn it to right (clockwise). **(Figure 5).** Before attaching the tap, make sure that the pin on the tap snaps into the slot exactly. **(Figure 5).**

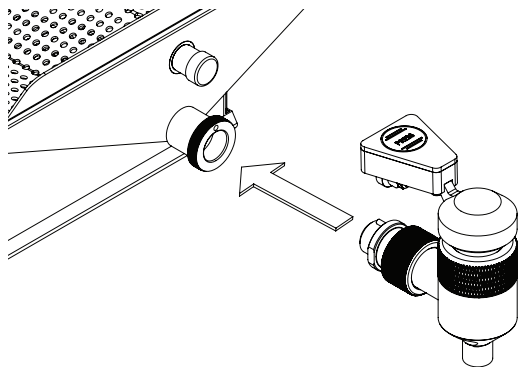


Figure 5

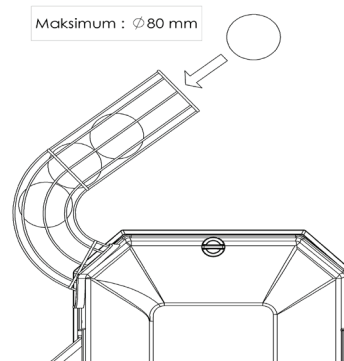


Figure 4

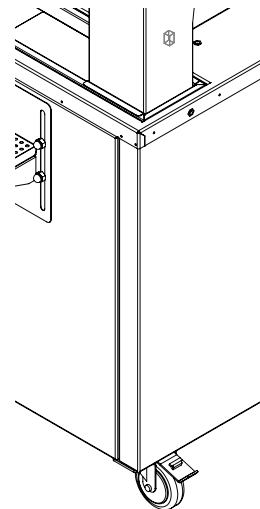


Figure 3

4.2 Start Up

Fill in the basket that is on top of your machine with the fruits.

Caution: The 'Cafe Type' s basket takes 7 kg, The CC38 'With Glass', 'With Tank' and 'Fresh' model's Baskets take standantly 15 kg and optional 28 kg of the recommended fruit as capacity.

Caution: Be sure that fruits are already washed before filling into the basket.

Put a glass, a carafe or a bottle on the Drip Tray while squeezing process at the models; 'Cafe Type', 'With Glass' and 'Fresh'.

Press the green button on the On-Off Button located on the other side of your machine. **(Figure 6).**

Caution: To start the Fresh model, you have to turn the on / off button switch clockwise to open position and then press the tap. **(Figure 7).**

Caution: Because of safety detectors, your machine will not start if its cover is not placed correctly.

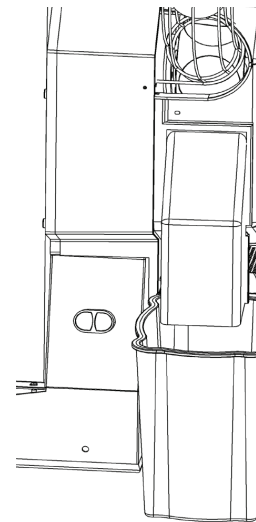


Figure 6

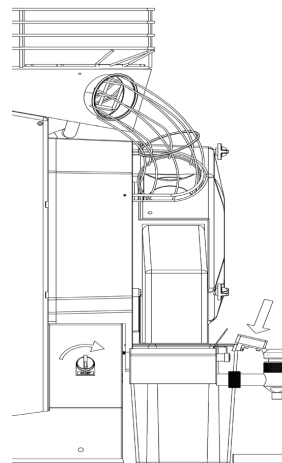


Figure 7

4.3 Cleaning

You can clean your machine by following the steps below;

- 1- Press the red button of your machine when the squeezing process is over. **(Figure 6).**

Caution: To stop the Fresh Model machine, turn the on/off switch to the off position by turning it counterclockwise.

- 2- Unplug your machine.

- 3- Remove the filter in front of your machine. **(Figure 9).**

- 4- By unscrewing Female Screws remove the front cover. **(Figure 8).**

- 5- Grasp the handle of the Blade and pull it towards you. **(Figure 10).**

Caution: The Blade is very sharp.
Be careful.

- 6- Remove the right and left peelers. **(Figure 11).**

Caution: Do not start to squeeze before replacing the right and left peelers.

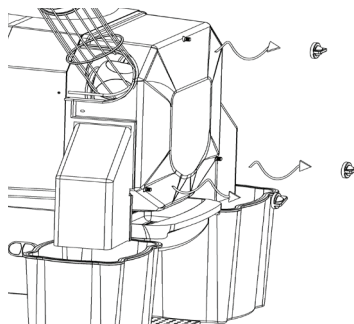


Figure 8

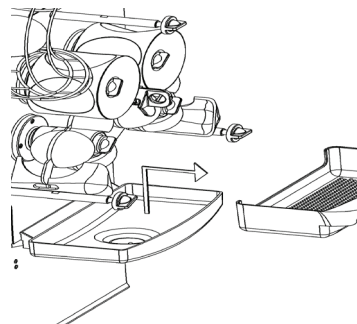


Figure 9

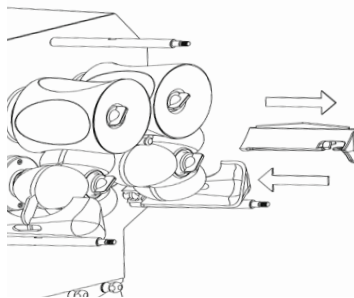


Figure 10

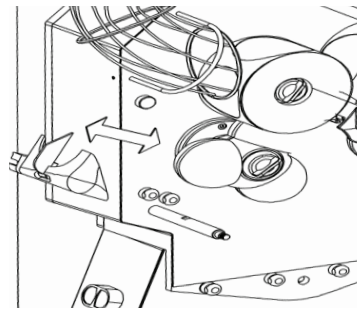


Figure 11

7-Remove the male screws by unscrewing them. **(Figure 12).**

8-Remove the Male and Female Squeezing Balls.

Caution: The Male and Female Squeezing Balls must be disassembled and assembled at the same time.

All parts can be cleaned with warm water.

To clean the Juice Tank and the Tap at the models 'Cancan 38 With Tank' and 'Fresh' models, you can fill water into the Juice Tank and turn the tap so that the fruit articles can be washed out completely.

To prevent clogging the Filter, often clean the fruit pulp and seeds that is accumulated at the surface.

It is advised to clean the Turning Disk frequently against the possibility of putting soft and damaged fruit into the Basket. **(Figure 13).**

Demountable parts of the Mobile Stand such as the Pipes and the Connection Panel for Peel Transfer should be cleaned with a soaped soft fabric and s rinsed out after squeezing process.

Never use abrasives in cleaning to prevent the damaging of the squeezing system.

Put all the pieces back to their places with the first attached principle, which was removed last time. All parts will settled in their places without requiring extra effort.

Caution: Be sure that all parts are correctly seated in their places.

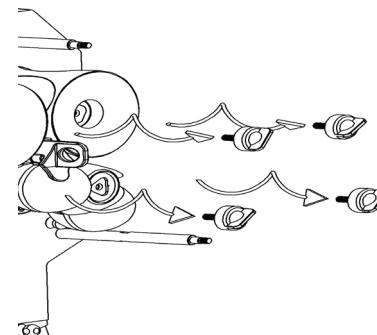


Figure 12

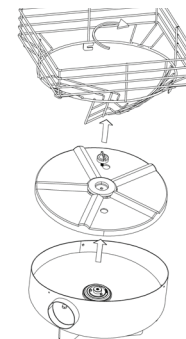


Figure 13



5. MAINTENANCE

Your device does not require any routine maintenance other than daily cleaning.

Caution: In need to replace or renew of the spare parts, we recommend you to use only our company's production spare parts.



6. SPARE PARTS PICTURES AND LIST

6.1 Cancan 28 Cafe Type (0206)

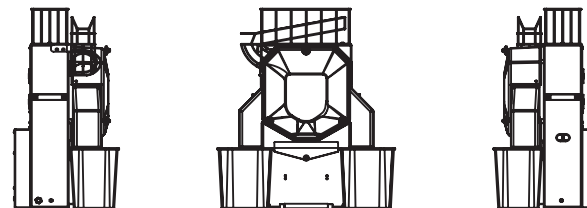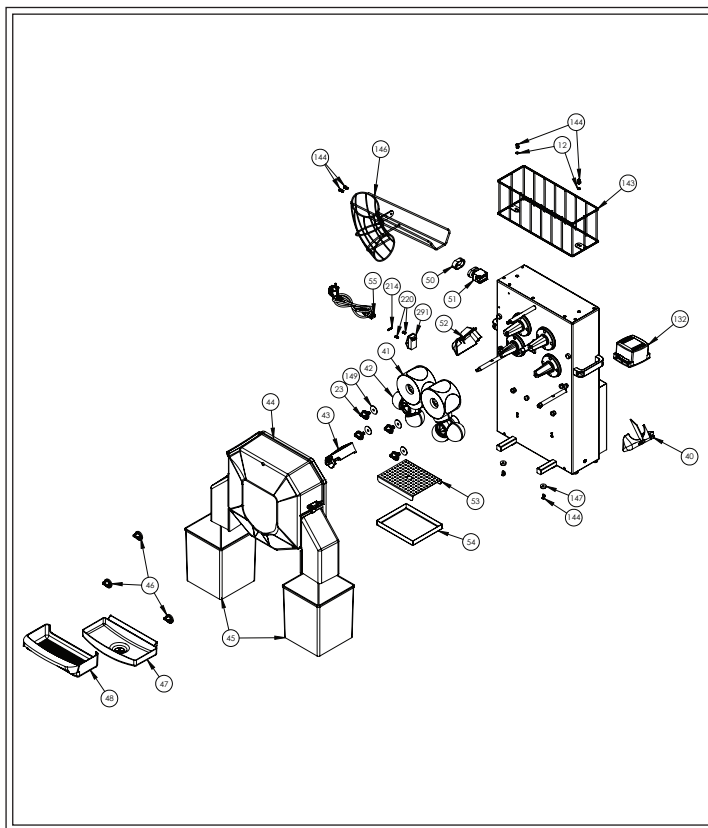



Item No	Reference No	Item Name
12	60123	M6 Washer (Stainless)
23	76016	Male Screw
40	72087	AJ Peeler (Right)
41	44013	AJ Female Squeezing Ball
42	44017	AJ Male Squeezing Ball
43	76123	AJ Blade
44	76020	AJ Cover (Assembled)
45	44032	AJ Peel Bucket
46	76015	Female Screw
47	72070	AJ Strainer Tray
48	72071	AJ Strainer
50	55045	AJ Start-Stop Button Silicon Cover
51	55044	AJ Start-Stop Button
52	72088	AJ Peeler (Left)
53	70361	Upper Drip Tray
54	70362	Lower Drip Tray
55	55114	Power Cable with Plug
132	55005	AJ Electronic Card
143	76017	Cancan 28 Chamber Wire
144	60200	Imbus Curved M6x16 Bolt (Stainless)
146	70081	Cancan 28 Side Feeding Wire
147	72074	Rubber Base (Small)
149	44118	Male Screw Silicon Gasket
214	55136	10 A Glass Fuse
220	60039	YSB M4x10 Bolt (Stainless)
291	55116	On-Off Power Socket

6.2 Cancan 38 With Glass (0203)

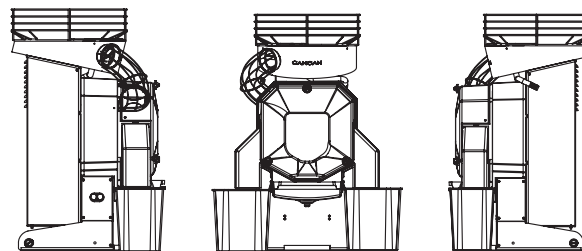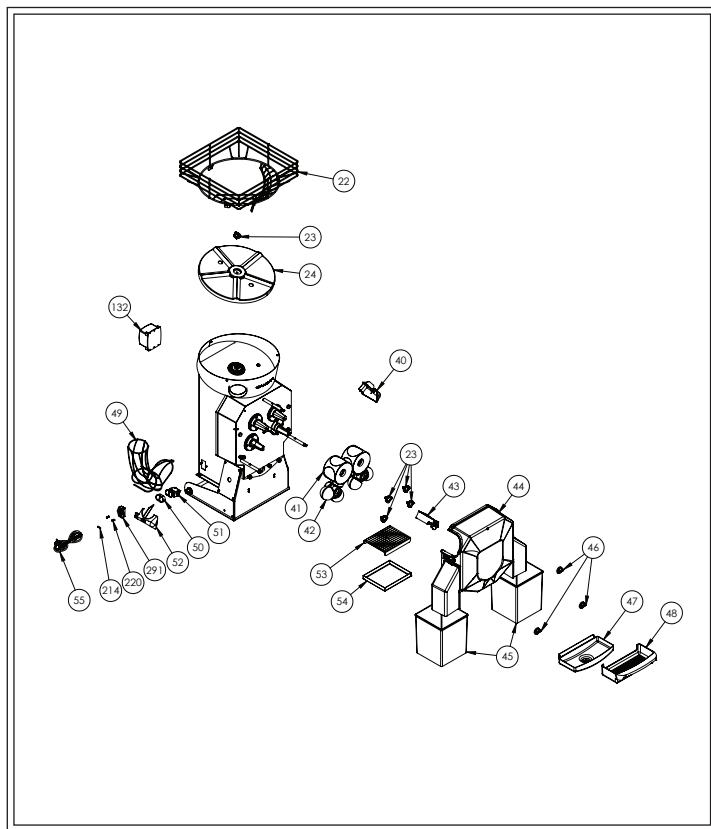



Item No	Reference No	Item Name
22	76134	AJ Chamber Wire
23	76016	Male Screw
24	76140	AJ Rotating Disc
40	72087	AJ Peeler (Right)
41	44013	AJ Female Squeezing Ball
42	44017	AJ Male Squeezing Ball
43	76123	AJ Blade
44	76020	AJ Cover (Assembled)
45	44032	AJ Peel Bucket
46	76015	Female Screw
47	72070	AJ Strainer Tray
48	72071	AJ Strainer
49	70140	AJ Side Feeding Wire
50	55045	AJ Start-Stop Button Silicon Cover
51	55044	AJ Start-Stop Button
52	72088	AJ Peeler (Left)
53	70361	Upper Drip Tray
54	70362	Lower Drip Tray
55	55114	Power Cable with Plug
132	55005	AJ Electronic Card
214	55136	10A Glass Fuse
220	60039	YSB M4x10 Bolt (Stainless)
291	55116	On-Off Power Socket

6.3 - Cancan 38 With Juice Tank (0204)

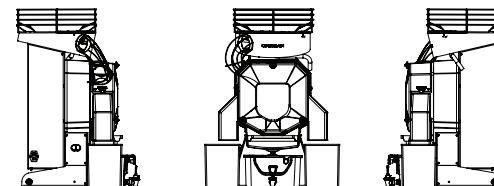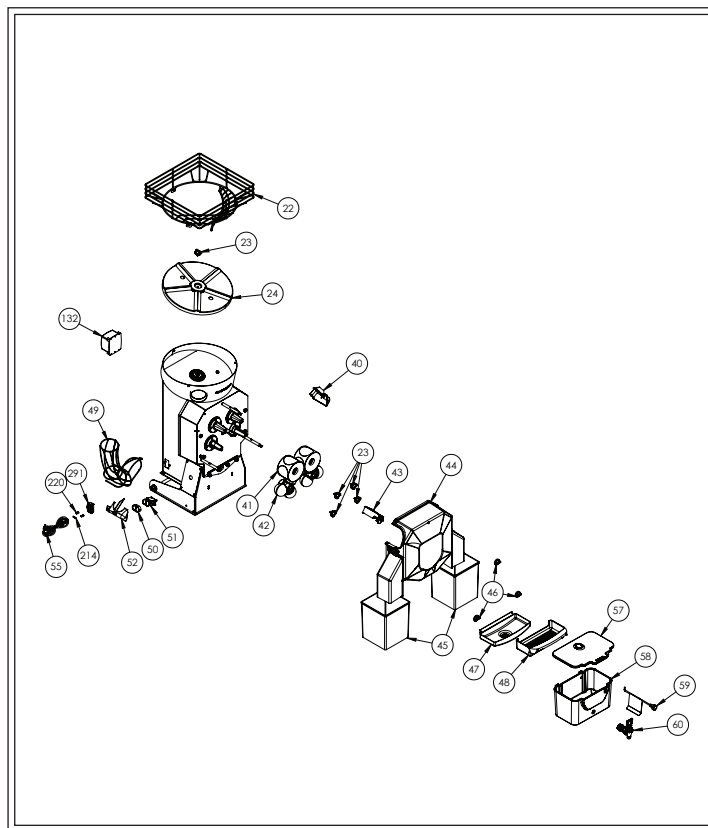



Item No	Reference No	Item Name
22	76134	AJ Chamber Wire
23	76016	Male Screw
24	76140	AJ Rotating Disc
40	72087	AJ Peeler (Right)
41	44013	AJ Female Squeezing Ball
42	44017	AJ Male Squeezing Ball
43	76123	AJ Blade
44	76020	AJ Cover (Assembled)
45	44032	AJ Peel Bucket
46	76015	Female Screw
47	72070	AJ Strainer Tray
48	72071	AJ Strainer
49	70140	AJ Side Feeding Wire
50	55045	AJ Start-Stop Button Silicon Cover
51	55044	AJ Start-Stop Button
52	72088	AJ Peeler (Left)
55	55114	Power Cable with Plug
57	44024	AJ Juice Tank Cover
58	72033	AJ Juice Tank
59	60055	Locking Screw Grip
60	72031	AJ Juice Tank Tap
132	55005	AJ Electronic Card
214	55136	10A Glass Fuse
220	60039	YSB M4x10 Bolt (Stainless)
291	55116	On-Off Power Socket

6.4 - Cancan 38 Fresh [0205]

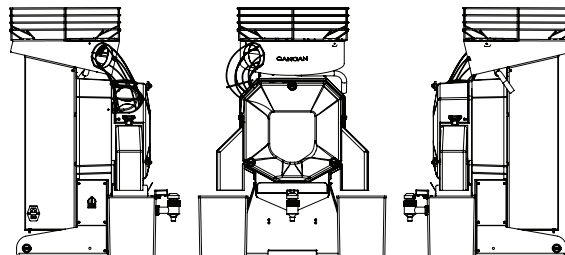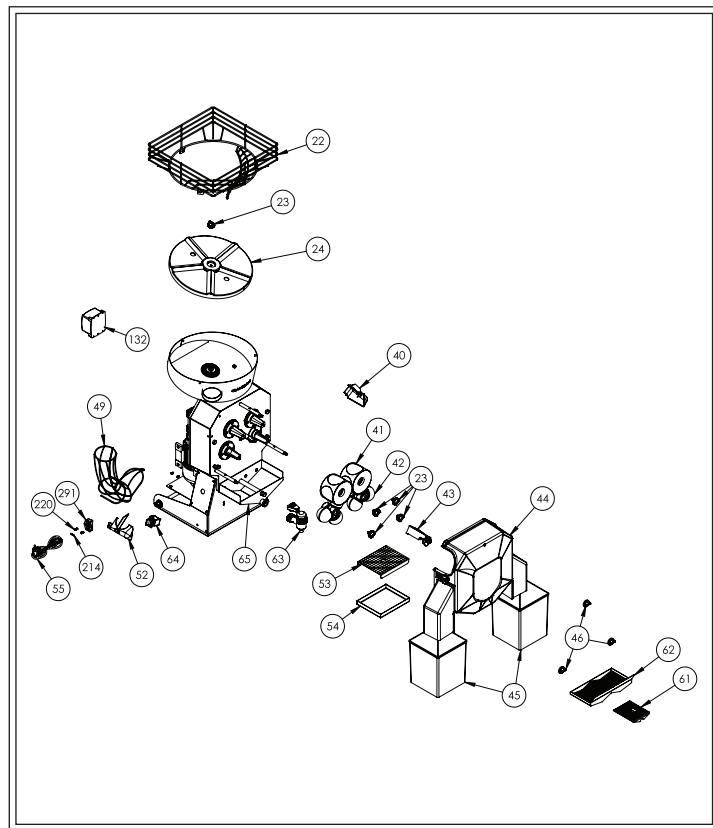



Item No	Reference No	Item Name
22	76134	AJ Chamber Wire
23	76016	Male Screw
24	76140	AJ Rotating Disc
40	72087	AJ Peeler (Right)
41	44013	AJ Female Squeezing Ball
42	44017	AJ Male Squeezing Ball
43	76123	AJ Blade
44	76020	AJ Cover (Assembled)
45	44032	AJ Peel Bucket
46	76015	Female Screw
49	70140	AJ Side Feeding Wire
52	72088	AJ Peeler (Left)
53	70361	Upper Drip Tray
54	70362	Lower Drip Tray
55	55114	Power Cable with Plug
61	76156	AJ Fresh Small Strainer
62	76155	AJ Fresh Large Strainer
63	76158	AJ Fresh Tap
64	55042	AJ Fresh Start-Stop Button
65	76157	AJ Fresh Chamber
132	55005	AJ Electronic Card
214	55136	10A Glass Fuse
220	60039	YSB M4x10 Bolt (Stainless)
291	55116	On-Off Power Socket

6.5 - Cancan 38 With Cooling System (0208)

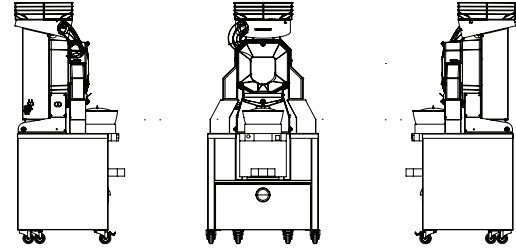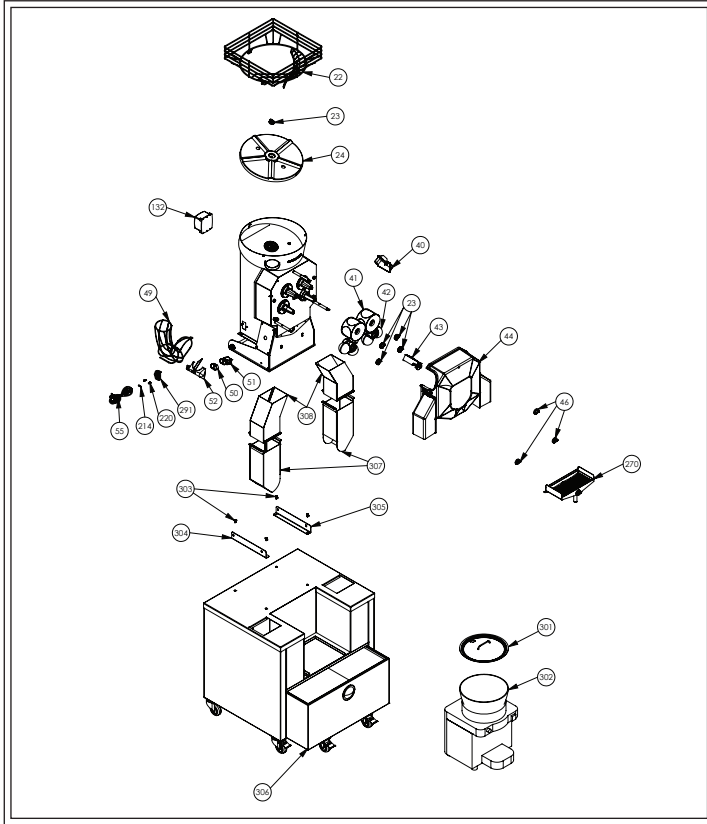



Item No	Reference No	Item Name
22	76134	AJ Chamber Wire
23	76016	Male Screw
24	76140	AJ Rotating Disc
40	72087	AJ Peeler (Right)
41	44013	AJ Female squeezing Ball
42	44017	AJ Male squeezing Ball
43	76123	AJ Blade
44	76020	AJ Cover (Assembled)
46	76015	Female Screw
49	70140	AJ Side Feeding Wire
50	55045	AJ Start-Stop Button Silicon Cover
51	55044	AJ Start-Stop Button
52	72088	AJ Peeler (Left)
55	55114	Power Cable with Plug
132	55005	AJ Electronic Card
214	55136	10A Glass Fuse
220	60039	YSB M4x10 Bolt (Stainless)
270	76233	AJ Cooler Assembled (Complete)
291	55116	On-Off Power Socket
301	16059	Cooler Metal Cover
302	44119	Cooler (R290 is used as the cooler)
303	60047	YSB M6x16 Bolt (Stainless)
304	70354	Foot L Connection Right
305	70355	Foot L Connection Left
306	76490	Mobile Stand with Cooler System (Assembled)
307	76489	Cooler System Mobile Stand Bottom Pipe (Assembled)
308	76491	Cooler System Mobile Stand Upper Pipe (Assembled)

6.6 - Cancan 32 With Glass (0601)

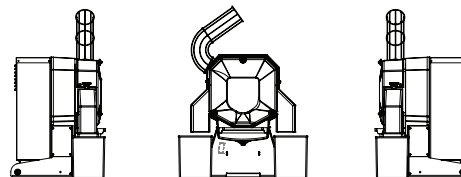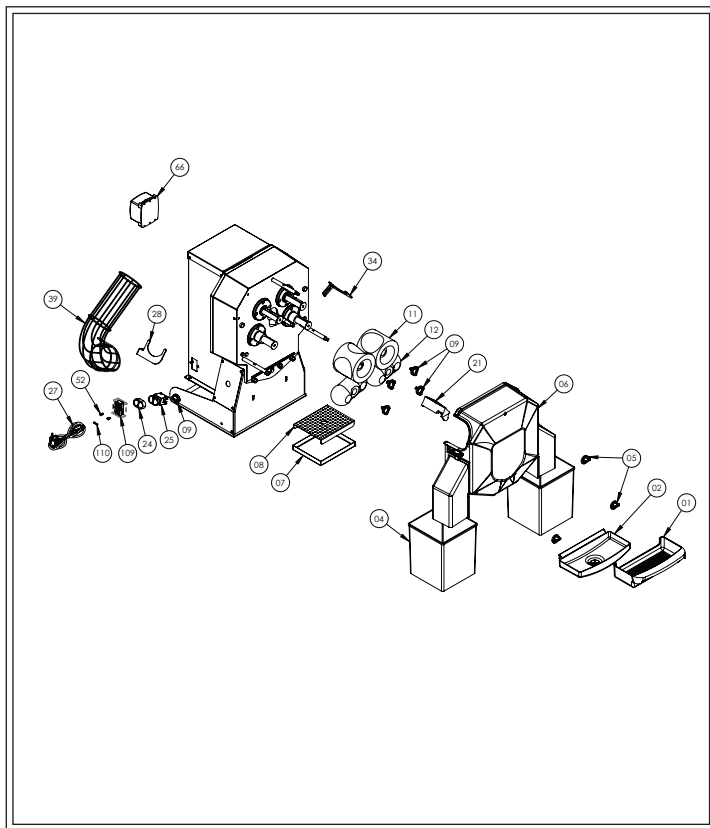

Item No	Reference No	Item Name
01	72071	AJ Strainer
02	72070	AJ Strainer Tray
04	44032	AJ Peel Bucket
05	76015	Female Screw
06	76020	AJ Cover (Assembled)
07	70362	Lower Drip Tray
08	70361	Upper Drip Tray
09	76016	Male Screw
11	72106	APJ Female Squeezing Ball
12	72107	APJ Male Squeezing Ball
21	76191	CC32 Blade
24	55045	AJ Start-Stop Button Silicon Cover
25	55044	AJ Start Stop Button
27	55114	Power Cable with Plug
28	70135	Pomegranate Left Peeler
34	70133	Pomegranate Right Peeler
39	70267	AJ Manual Feeder Wire
52	60039	YSB M4x10 Bolt (Paslanmaz)
66	55005	AJ Electronic Card
109	55116	On-Off Power Socket
110	55136	10A Glass Fuse

6.7 - Cancan 32 With Juice Tank (0602)

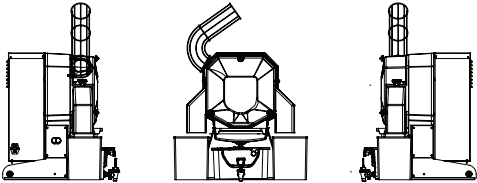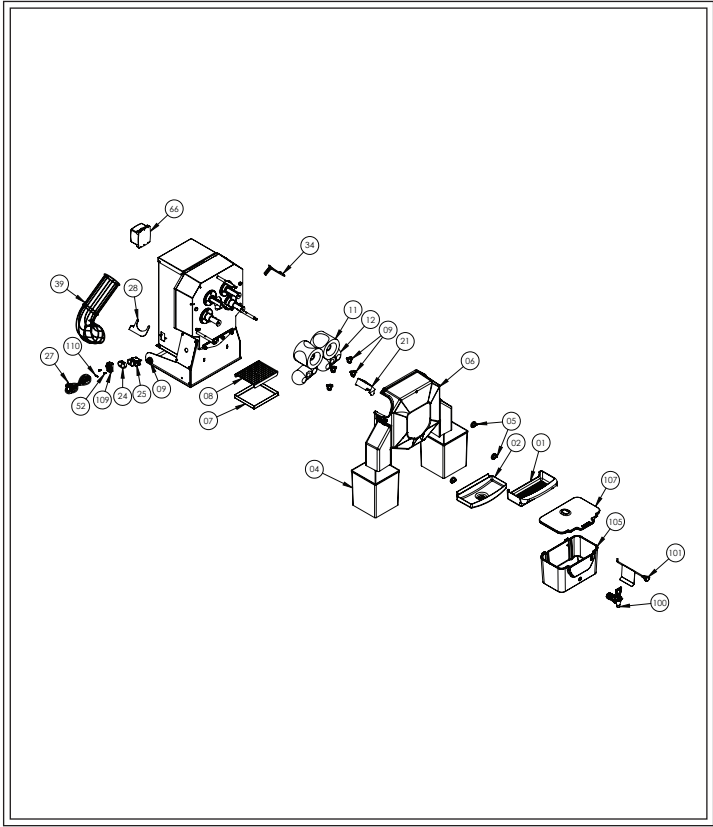


Item No	Reference No	Item Name
01	72071	AJ Strainer
02	72070	AJ Strainer Tray
04	44032	AJ Peel Bucket
05	76015	Female Screw
06	76020	AJ Cover (Assembled)
07	70362	Lower Drip Tray
08	70361	Upper Drip Tray
09	76016	Male Screw
11	72106	OPJ Female Squeezing Ball
12	72107	OPJ Male Squeezing Ball
21	76191	CC32 Blade
24	55045	AJ Start Stop Button Silicon Cover
25	55044	AJ Start Stop Button
27	55114	Power Cable with Plug
28	70135	Pomegranate Left Peeler
34	70133	Pomegranate Rightt Peeler
39	70267	AJ Manual Feeder Wire
52	60039	YSB 4x10 Bolt (Stainless)
66	55005	AJ Electronic Card
99	76146	AJ Juice Tank (Assembled)
100	72031	AJJuice Tank Tap
101	60086	AJ Juice Tank Mixing Part
105	72033	AJ Juice Tank
107	44024	AJ Juice Tank Cover
109	55116	On-Off Power Socket
110	55136	10A Glass Fuse

7. ACCESSORIES

7.1 Mobile Stand (1101)


- Can be used with all models.
- Made of 304 Quality Stainless steel material.
- 360° Rotatable wheel with brake.
- 70 kg capacity pulp collection bucket
- Height adjustable Drip Tray according to bottle and glass size.

Item No	Reference No	Item Name
01	76185	Mobile Stand Pipe (Assembled)
02	76186	Mobile Stand Connection Panel for Peel Transfer
03	60047	YSB M6x16 Bolt (Stainless)
05	70355	Foot L Connection Left
06	70354	Foot L Connection Right
09	44014	Peel Bucket (70 kg)
10	70360	Mobile Stand Drip Tray Carrier Slide
11	70361	Upper Drip Tray
12	70362	Lower Drip Tray
14	60063	M10 Cap Nut (Stainless)
16	60179	Rotary Wheel (Ø100)
17	60180	Rotary Lockable Wheel (Ø100)

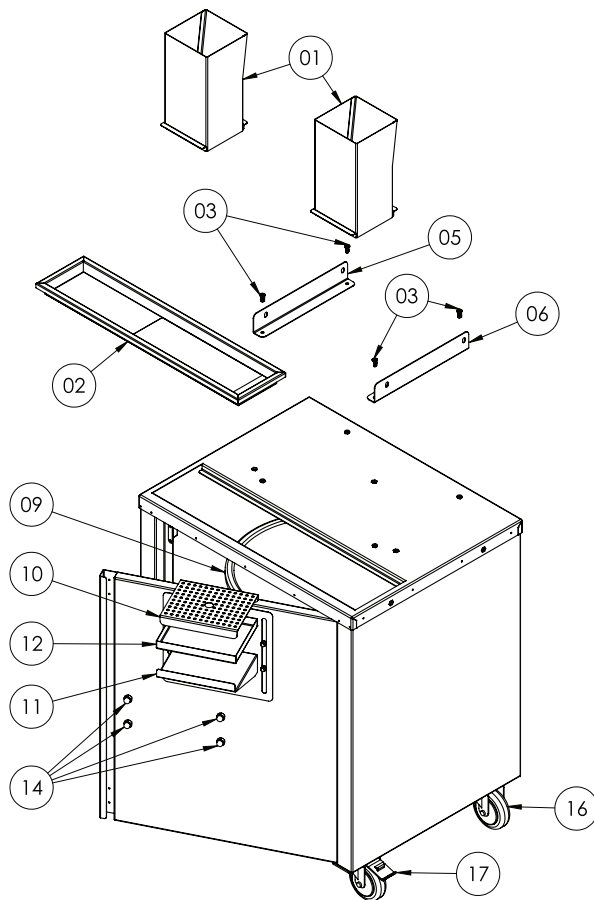


7.2 - Cancan 28 Mobile Stand (1102)

Item No	Reference No	Item Name
01	76185	Mobile Stand Pipe (Assembled)
02	76186	Mobile Stand Connection Panel for Peel Transfer
09	44014	Peel Bucket (70 kg)
10	70360	Mobile Stand Drip Tray Carrier Slide
11	70361	Upper Drip Tray
12	70362	Lower Drip Tray
14	60063	M10 Cap Nut (Stainless)
16	60179	Rotary Wheel (Ø100)
17	60180	Rotary Lockable Wheel (Ø100)
18	60123	M6 Washer (Stainless)
19	60047	YSB M6x16 Bolt (Stainless)
21	70186	Mobile Stand Cafe28 Connecting Metal Sheet

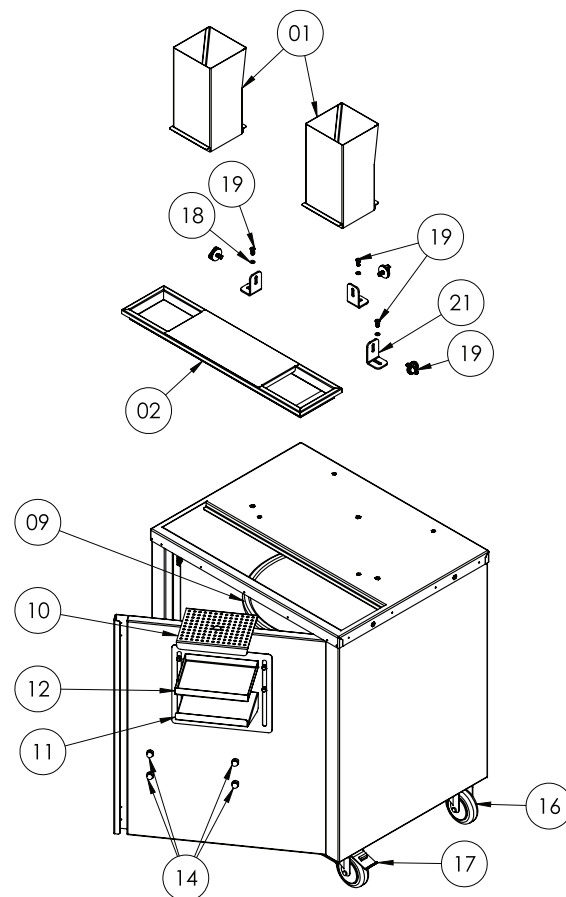


7.3 Mobile Stand With Double Trash Can (1107)

Item No	Reference No	Item Name
04	70355	Foot L Connection Left
09	70401	Upper Drip Tray
10	70402	Lower Drip Tray
17	44014	Peel Bucket(70 kg)
24	60179	Rotary Wheel
35	60180	Rotary Lockable Wheel (Ø100)
38	70354	Foot L Connection Right
39	60047	YSB M6x16 Bolt (Stainless)
42	76246	Pipe (Assembled)

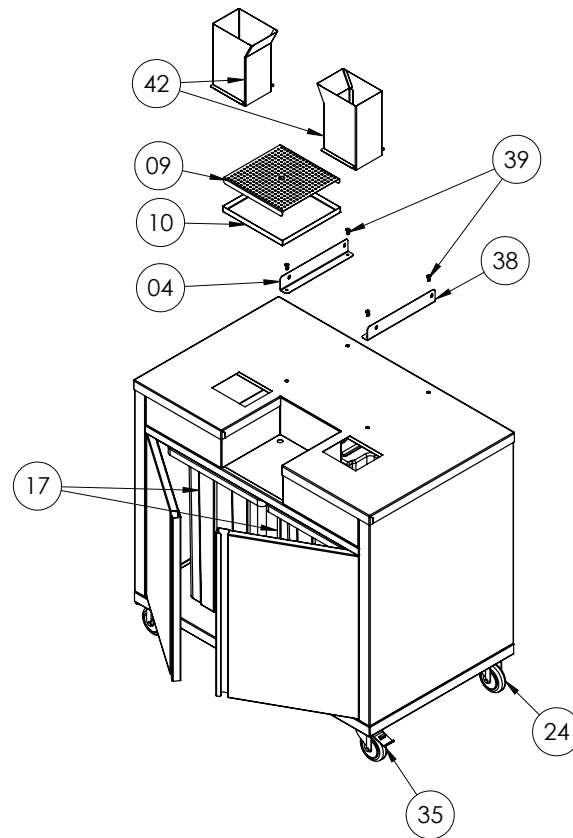


7.4 - Mobile Stand (Cooler Model) (1110)

Item No	Reference No	Item Name
301	16059	Cooler Metal Cover
302	44119	Cooler
303	60047	YSB M6x16 Bolt (Stainless)
304	70354	Foot L Connection Right
305	70355	Foot L Connection Left
306	76490	Mobile Stand with Cooler System (Assembled)
307	76489	Cooler System Mobile Stand Bottom Pipe (Assembled)
308	76491	Cooler System Mobile Stand Upper Pipe (Assembled)

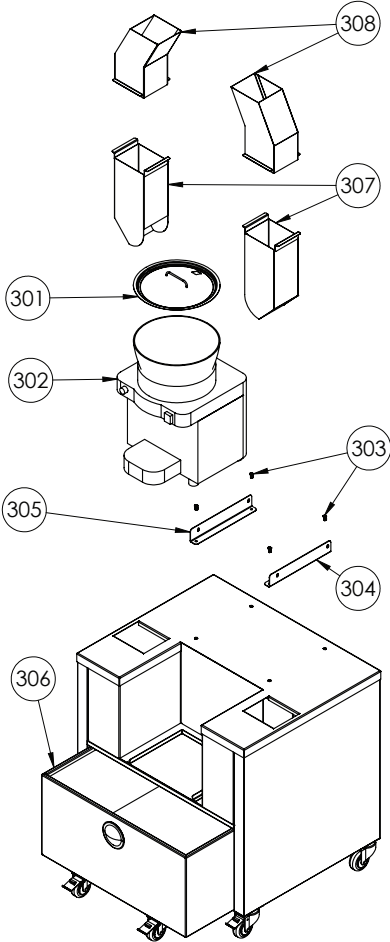


7.5 - Bottle Stand With Shelves (1117)

- Can be used for all models that are settled on Mobile Stand.
- It can be used by mounting it next to the Mobile Stand.
- Made of 304 Quality Stainless steel material.
- 0.33 lt - 0.5 lt and 1 lt bottle storage capacity

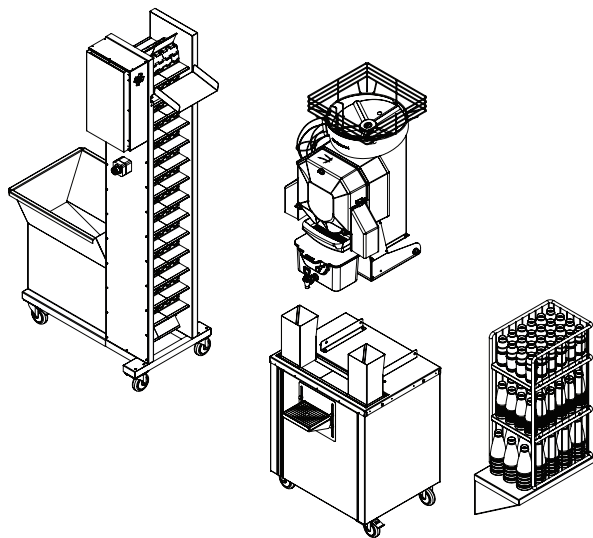


7.6 - Conveyor (0402)

- It can be used together with the models 'With Glass', 'With Juice Tank' and 'd'Fresh' that are settled on Mobile Stand.
- Made of 304 Quality Stainless steel material.
- 360° rotating, brakeable wheels.
- 60 kg orange storage capacity.
- 0,25 kw motor power
- 220 V, 50/60 Hz

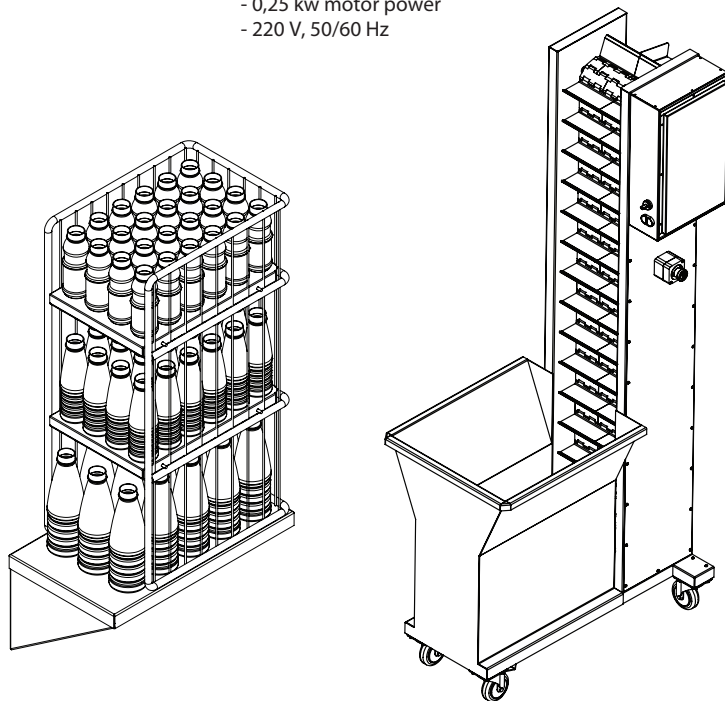

7.7 - Aj Lemon Tools (79998)

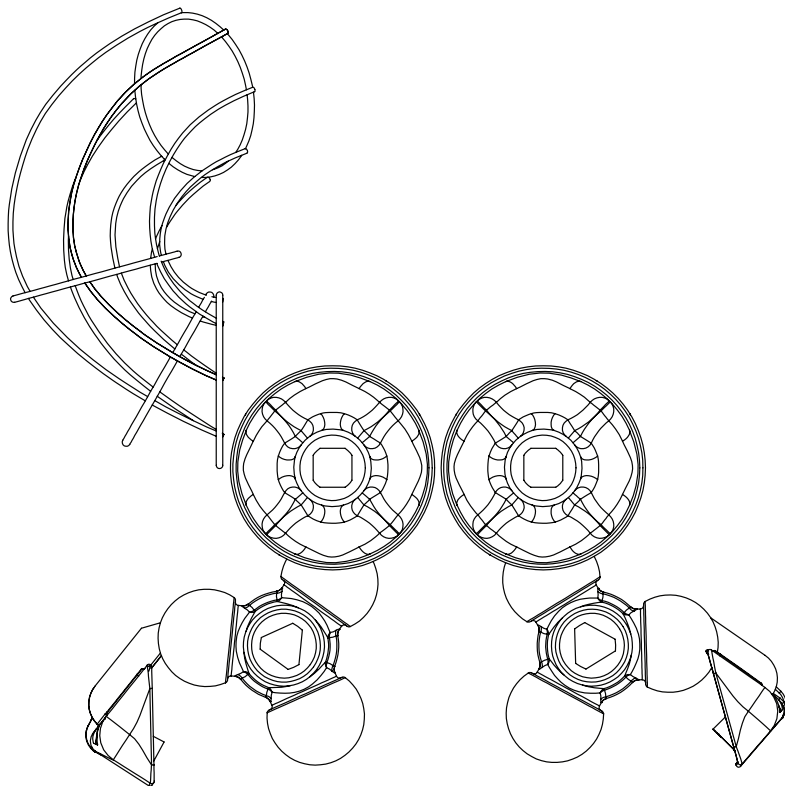

8. PROBLEMS, SOLUTIONS AND SAFETY MEASURES

Problem	Possible Cause	Action
Machine does not operate.	Machine is not in the ON position	Switch the machine ON.
	No power supply	Check the power outlet.
	Front cover is not installed correctly	Ensure that the front cover is properly installed and that the cover magnets are in place.
	Motor thermal protection has been activated due to overload or jamming	Eliminate the cause of the overload or blockage. Reset the thermal protection. Check the fuses. Restart the machine. If the problem persists, contact technical service.
	Fuse inside the power socket has blown	If the fuse inside the power socket has blown, a spare fuse is available in the fuse holder. Replace it and continue operation. If the problem persists, contact technical service.
	Electronic control board fuse has blown	Contact technical service.
	Safety switch malfunction	
	ON/OFF button malfunction	
	Power cord or plug damaged	
Machine frequently stops during juicing operation.	Insufficient voltage	Check the voltage and compare it with the values specified in the user manual. Do not operate multiple machines from the same outlet.
	Electrical circuit fault	Contact technical service.
	Insufficient ventilation	Ensure that the ventilation grilles are not blocked.
	Overload or jamming	Stop the machine. Eliminate the cause of the overload or blockage. If the problem persists, contact technical service.
Pressing balls become blocked.	Fruits are causing blockage	Clean the pressing balls.
Pressing balls do not rotate synchronously.	Mechanical failure	Contact technical service.
Peel remover is broken.	Peel removers are not installed correctly	Review the installation instructions in the user manual and ensure proper placement.
Motor runs but pressing balls do not rotate.	Internal failure	Operating the machine before resolving the fault may damage the motor. Turn off the machine and contact technical service.
Filter is clogged.	Juice contains excessive pulp or seeds	Clean the filter.

10. CE CERTIFICATE

SZUTEST

ATTESTATION OF COMPLIANCE
UYGUNLUK ONAYINumara: **GYC-KD-2315301**Sertifika Sahibi:
Owner of Certificate:CANCAN MEYVE PRESLERİ SAN. TİC. LTD. ŞTİ.
YEŞİLTEPE MAH. MODERN SAN. SİT. 8030 SOK. NO:15/1 SAKARYAİşletme Yeri ve Adresi:
Location:CANCAN MEYVE PRESLERİ SAN. TİC. LTD. ŞTİ.
YEŞİLTEPE MAH. MODERN SAN. SİT. 8030 SOK. NO:15/1 SAKARYAÜrün ve Açıklama:
Products and Description:OTOMATİK PORTAKAL SIKMA MAKİNESİ
AUTOMATIC ORANGE JUICERTicari Markalar:
Trademarks:

CANCAN

Serî ve Modelleri:
Series and Models:

0201, 0202, 0203, 0204, 0205, 0206, 0207, 0208, 0801, 0802

Referans Standard(ler):
Reference Standard(s):

EN 60335-1:2020, EN 60335-2-64:2021

Test Raporları:
Test Reports:ELK2305-02T Numaralı ve 25/05/2023 Tarihli Test Raporu
Test Report No. ELK2305-02T and Dated 25/05/2023

İncelenenlin sonucu ve bu doküman SZUTEST'e e-bölçleme kapsamında sunulan herhangi bir doküman doğrulanmışdır. Bu e-bölçleme kriterlerinin ve e-bölçlemenin kendisinin geçerli olduğu sürece ve aşağıda belirtilen geçerlilik tarihine kadar geçerlidir. Ürünler için gerekli e-bölçleme ve kalite kontrolleri gerçekleştirilmelidir. Temel Güvenlik gereklilikleri için yeterli çözümün üretimi ve uygunluk beyanı sağlanmalıdır. SZUTEST, yukarıda belirtilen ürünlerin referans edilen teknik dokümanların 3'üncü taraf inceleme için gerekli talebe istinaden yapıldığını beyan eder. 2014/35/AB Belirli Yüksek Gerilimli Düşük Gerilimli Elektrikli Ekipmanların Güvenliği Hakkında Direktif (LVD) kapsamında değerlendirilmelidir. Bu belge yasal gerekliliğin uygulanması için kullanılmaz. Bu doküman bu gereklilikleri yerine getirmenizi garanti etmez ve ürünün ürünleri pazara sürmeden önce sağlanması gereken gerekliliklere uyulduğunu göstermek için kullanılmaz. Bu notifiyasyon dışı inceleme herhangi bir Avrupa Yönetmeliği gereğince alınırsanız herhangi bir notifiyasyona ilişkin ve SZUTEST'in notifiyasyon kapsamında yapılmış bir inceleme değildir. Sertifikanın güncel geçerlilik durumu SZUTEST'in web sitesinden kontrol edilmelidir.

The results of the review and this document report can only be valid unless no document under the scope of signed agreement submitted to SZUTEST has been changed. If the agreement terms and the agreement itself remains valid and until the date of validity stated below. For devices, the manufacturer must perform internal manufacturing and quality controls, when necessary, provide proper solutions for essential safety requirements and ensure compliance with the requirements of the relevant standards. SZUTEST provides a signed agreement for the referenced technical file is performed upon voluntary request. It is the manufacturer's sole responsibility to conform to the requirements of 2014/35/EU Low Voltage Directive and this document cannot be used a legal document to claim any type of conformity. This document cannot replace any of these requirements and cannot be used to claim conformance to the requirements of the manufacturer before placing the products on the market. This document is not a certification and is not related with the notification scope of SZUTEST. The current validity of the certificate shall be checked from SZUTEST's website.

Certification Date / Belge Tarihi: 02/06/2023
Validity Date / Geçerlilik Tarihi: 01/06/2026

SZUTEST

Department Manager

1/1

FR-GAR-NA-01 R-02

SZUTEST UYGUNLUK DEĞERLENDİRME A.Ş.
Tezisu Mahallesi, Atila İnni SK. No:1 Umranıye 34774 İSTANBUL / TÜRKİYE

Szttest.com.tr

11. WARRANTY

Warranty Conditions:

- 1- All parts of the product are guaranteed by our company.
- 2- Warranty period starts from the delivery date of the product and unless otherwise stated, this period is 2 (two) year.
- 3- If the product malfunctions within the warranty period, the repair time is added to the warranty period. The repair time of the product is maximum 30 (thirty) days. This period shall commence from the date of notification to the seller of the product by the seller, dealer, agent, representative or manufacturer.
- 4- If the product is defective due to material or workmanship, or due to erroneous installation, within the warranty period, repairs will be made without labor cost and no fee under the changed part price or any other name.
- 5- The Product; - Within the warranty period from the date of delivery, if the same fault is repeated more than three times in a year or if four or more occurrences of different faults occur, the continuity of the unavailability of the product, -Exceeding maximum time of repairing, - In case the service station is not available, it shall be replaced free of charge in case it is determined that it is impossible to repair the malfunction with a report prepared by one of the seller, dealer, agency, representative, importer or manufacturer.
- 6- In case of occurring problems with guarantee document ,general directorate of consumer and competition protection department of industry and trade ministry is authorized insitutiton.

The following conditions are not covered by the warranty :

- 1- Determining that he products has been opened and repaired by unauthorized technical services,
- 2- If the product is damaged due to external influences such as natural disasters, electricity network, telephone line or wrong connection,
- 3- After delivery to the customer, the product is damaged during transportation, dropped or impact and damaged,
- 4- Defects arising from wrong usage of the product in its Instructions Manual,
- 5- Falsification and erasure of the date and serial number on the product document and in the warranty document,
- 6- The warranty is not covered in the event that any object falling within the product or its mechanical parts is blocked by liquid flow or overshooting to prevent air intake.

PRODUCT'S

Trade Mark : CANCAN
 Model : Automatic Juicer
 Type :
 Delivery Date and Place :
 Serial Number :
 Warranty Period : 2 (two) years
 Maximum Repair Time 30 (Thirty) days

CANCAN®
 MIEVİS-PRİŞİLERİ MAK. VE TİC. LTD. ŞTİ.
 Yönetim Mh. 00502 Sok. No: 15 Etiler / ŞAKARİA
 35100 (2016) Mh. 44. P2524 351 43 45
 A.İ.Ş. Kurumları V.D. 159 007 8565
 Mersis No: 01990079550000000000 T.C. Sic.No:15280

AUTHORISED DEALER


Name :
 Address :
 Telephone :
 Invoice Date :
 Invoice No :
 Stamp / Signature :

Not / Note / Заметки

This image shows a full page of white paper with horizontal dotted lines. The lines are evenly spaced and run across the width of the page, providing a guide for handwriting or typing. There are no margins, text, or other markings on the page.

Not / Note / Заметки

This image shows a full page of a document template. It consists of a series of evenly spaced, horizontal grey lines running across the width of the page. The lines are thin and light in color, providing a guide for writing without being distracting. There are no margins, text, or other markings present on the page.

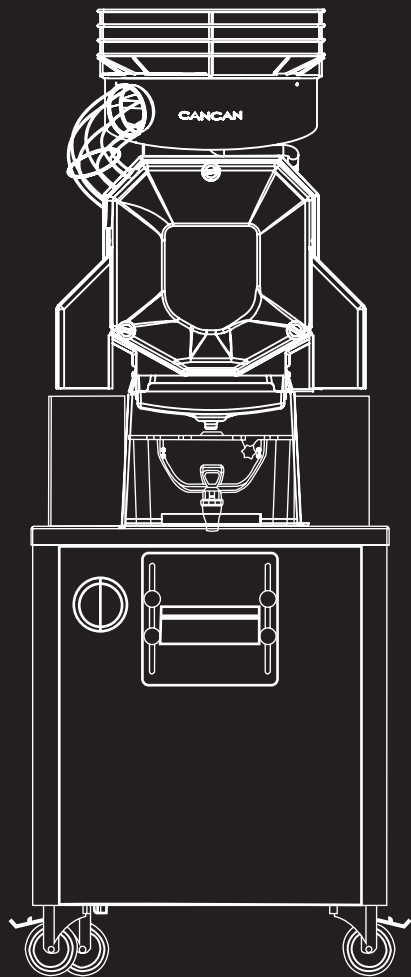

AUTOMATIC ORANGE JUICER MACHINES

USER GUIDE

CANCAN®

• SINCE 1958 •

horeca equipment for professional